

624B, 624D, 624F, 625B, 625D, & 625F Capacitance Manometer Pin-outs

Pin	Description
1	Trip Point-A V-level
2	First Pressure Output
3	Trip Point-A N.C.
4	Trip Point-A N.O.
5	Power Common
6	-15 VDC
7	+15 VDC
8	Trip Point-A Com
9	Trip Point-B N.O.
10	Trip Point-B N.C.
11	Trip Point-B Com
12	Press Output Rtn
13	Trip Point-B V-Level
14	No Connection
15	Chassis Ground